

RESETTING THE ZEUS ANTISTATIC BAR AFTER CLEANING

The Zeus Antistatic Bar has two cleaning stages::


1. Pre-warning stage:

Once the first preset cleaning time is reached, the LED indicator changes from blue to blinking blue and red. This indicates that the emitter tips should be cleaned with a soft brush (e.g., toothbrush) to remove any accumulated dirt. The bar remains functional.

Warning stage with function shutdown:

Once the second preset cleaning time is reached, the

2. LED indicator changes from blinking blue and red to blinking red, and the ionization is turned off.

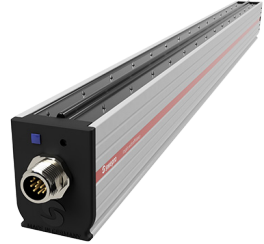

Cleaning and Resetting the Antistatic Bar

This procedure can be used in both warning stages and resets both cleaning times.

1. Cleaning:

Clean the emitter tips with a soft brush to remove any dirt. This is important to maintain the efficiency of static discharge.

2. Resetting:

1. When the bar has been connected for 30 seconds and the LED is red, press and hold the button next to the LED until the LED turns green.
2. Press the button again until the LED turns red again.
3. Disconnect the bar from the power for a few seconds.
4. Reconnect the bar. The LED will be blue again until the next cleaning signal.

www.swepro.com

